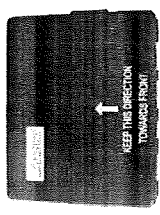
 
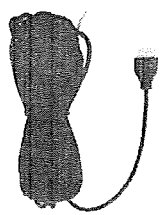
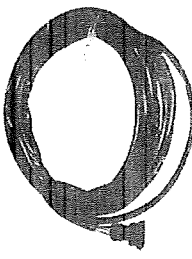


Packing list

Host	
Setter	
Cable A	
Cable B	
Cable C	
Cable D	

Auto Leveling System

User's Manual


- Auto Leveling System can adjust headlight up or down automatically and keep the headlight's beam at a suitable level.
- The following figures show a car without Auto Leveling System. When the car's load changes, the headlight's beam can not keep original direction.

Not use auto leveling system



- The following figures show a car with Auto Leveling System. When the car's load changes, the headlight's beam can keep original suitable direction.



Use auto leveling system

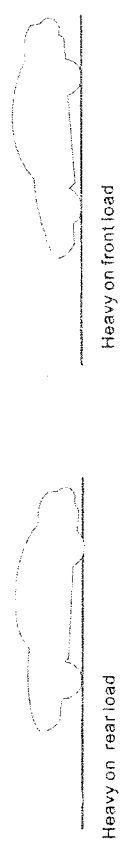

Installation Guide


Step 1:

Find a flat level position inside the car trunk , tear off the protective film at the bottom of host, according to the host shell's logo, the arrow towards the front of vehicles, and as far as possible parallel with the car body, put host a fixed within the trunk.

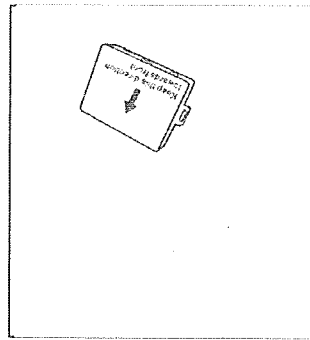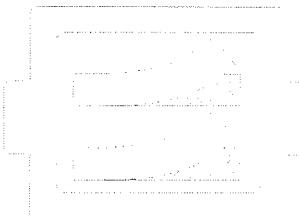

Step 2:

Make sure that the host connector and the corresponding signal lines A, B, C, cables are correctly connected according to the diagram,

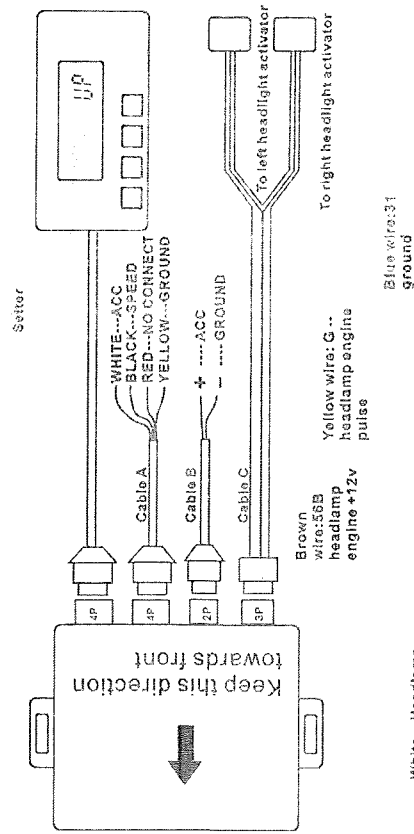


White---Headlamp engine pulse wire

Red---+12V


Blue wire:31 ground




Cable D

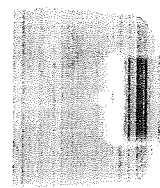

No need cable D



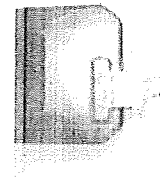


Need cable D

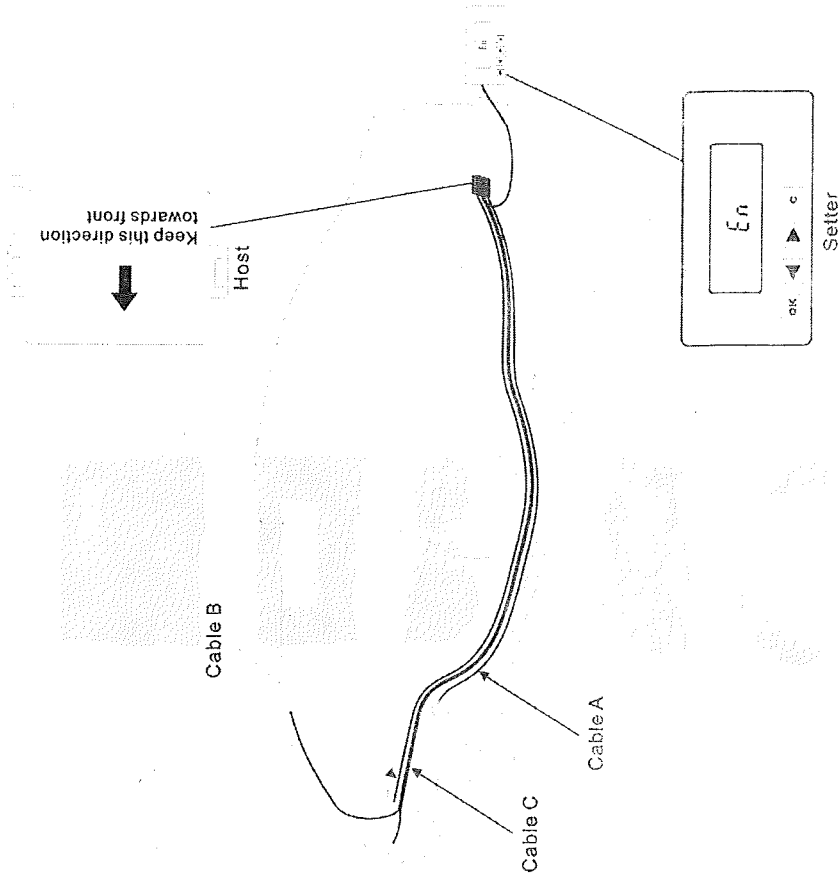

Step 3:

Keep the car body in totally levelling situation, turn the ACC on by car key, and light the low beam, by pressing the buttons "▲" and "◀" on the setter, When adjust the headlamp to perfect leveling situation, press "ok" button.

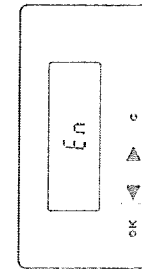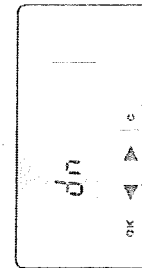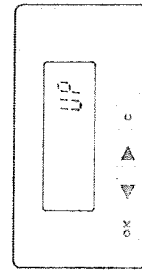

Step 4:

Remove the 'SETTER', please keep the display for next use